ENIGMA USER MANUAL

MERCEDES A - W176 EZS GECKO FILTER INSTALLATION

NEC EZS:

REQUIRED:

GECKO CAN MODULE

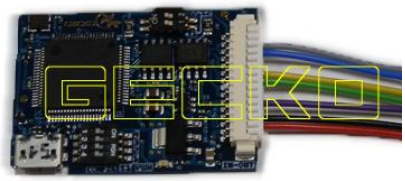

FOLLOW THIS INSTRUCTION STEP BY STEP:

1. Remove the EZS module from the car and open it **VERY CAREFULLY!**
2. Please check PCB VERSION on PHOTO1.
3. **REMOVE MARKED COMPONENT CAREFULLY** and solder cables according to colors to the points on board as shown on PHOTO2.
   ! SAVE THE REMOVED COMPONENT UNTIL YOUR JOB IS COMPLETED !
4. Set GECKO FILTER buttons as shown on PHOTO3.
5. Make sure that the connection you made is safe and secure.
6. Use silicone to mount GECKO on EZS's board.

VERSION 1

PHOTO 1: Please check your pcb board version. See pictures above.

FOR MORE INFORMATION

Call **0034 983 359 787** or visit **www.enigmatool.com**

DIAGCAR ELECTRONICS S.L. Ebanistería 1A, 47610 Zaratán, Spain

Diagcar Electronics S.L.

MERCEDES A - W176 EZS GECKO FILTER INSTALLATION

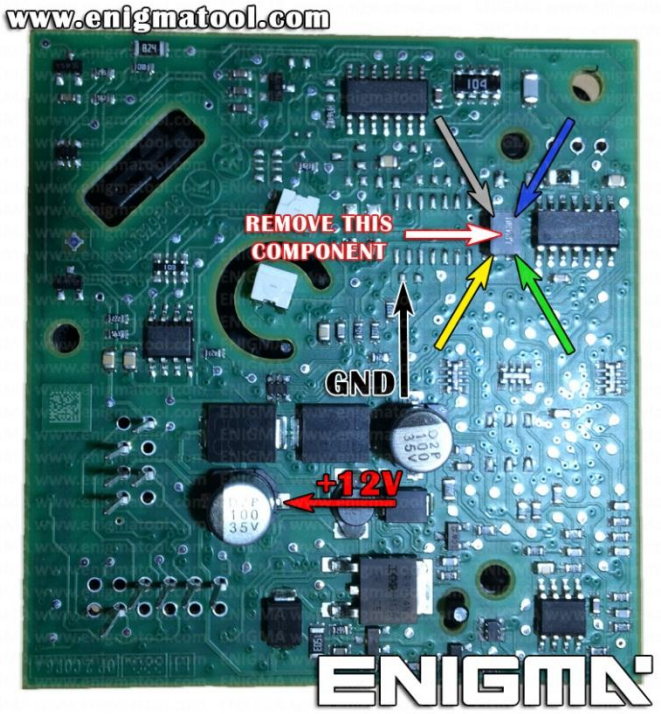

PHOTO 2: *Solder cables according to the colors like shown on the photo above.*

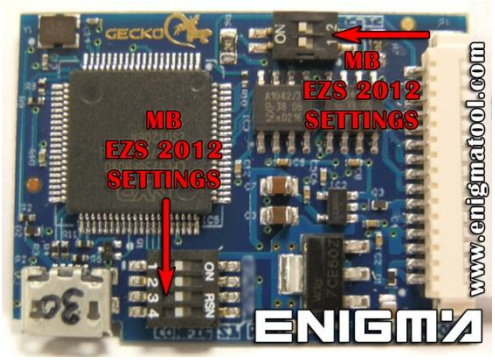

PHOTO 3: *Set GECKO FILTER buttons as shown on picture above.*

PHOTO 4: *Connection example for GECKO FILTER.*

MERCEDES A - W176 EZS GECKO FILTER INSTALLATION

VERSION 2

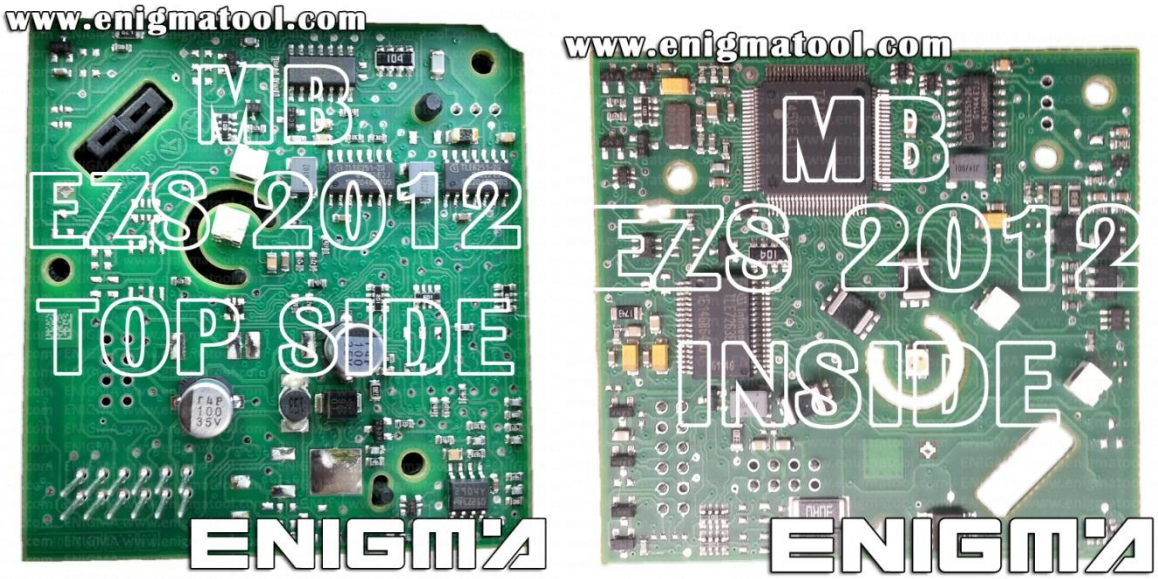

PHOTO 1: *Please check your pcb board version. See pictures above.*

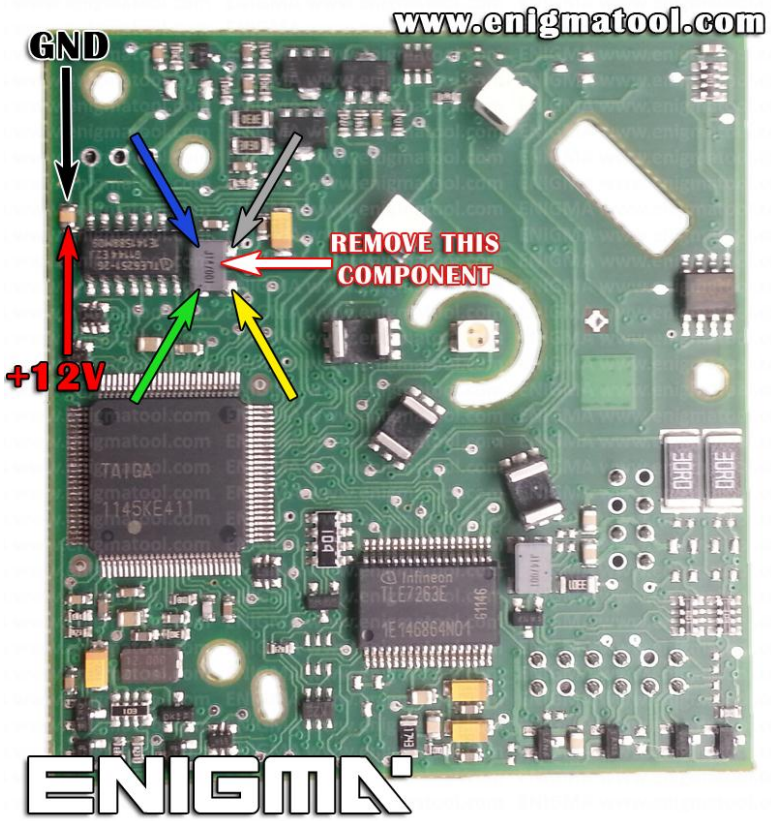

PHOTO 2: *Solder cables according to the colors like shown on the photo above.*

MERCEDES A - W176 EZS GECKO FILTER INSTALLATION

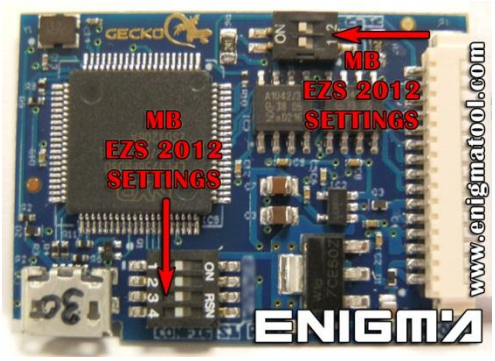

PHOTO 3: Set GECKO FILTER buttons as shown on picture above.

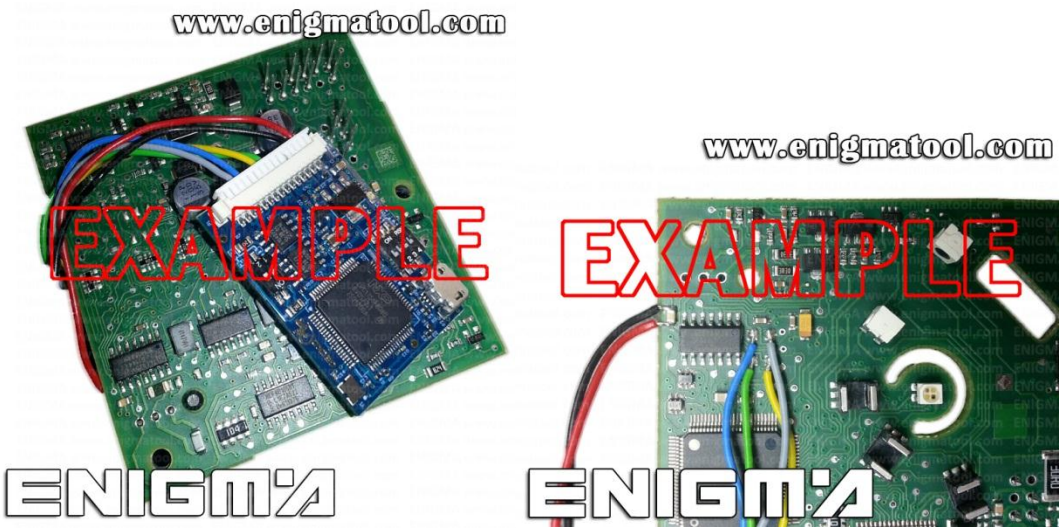

PHOTO 4: Connection example for GECKO FILTER.

LEGAL DISCLAIMER:

DIAGCAR ELECTRONICS S.L. does not take any legal responsibility of illegal use of any information stored in this document. Copying, distributing or taking any action in reliance with the content of this information is strictly prohibited.